

**MOD :BSB/6N-D1-R2**

**Production code : SB 60 F2\_**

**INSTRUCTIONS FOR INSTALLATION AND USE**  
**REFRIGERATED THROUGH SIDEBOARD**  
**4 CONTAINERS / 6 CONTAINERS**



## **REFRIGERATED THROUGH SIDEBOARD 4 CONTAINERS / 6 CONTAINERS**

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment.

### **1. SECURITY INSTRUCTIONS**

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as :

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- The machine has to be used only by qualified person.
- Never move the appliance when it is working.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, its after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- Before cleaning the appliance, do not forget to disconnect it.

## **2. CONTENTS OF CARDBOARD PACKAGING**

Device : A sideboard refrigerated

Accessories : A roof, two upright, two wires cover, two glasses, screws.  
Technical documentation of the thermostat  
The present note

## **3. CONFORMITY OF USE**


Use the refrigerated sideboard only to keep your cold meals (cold starters, shellfish, meat, desserts...) at a temperature between +2°C and +10°C during working and service hours. Afterwards they will be stores in a conventional cool chamber.

## **4. WAY OF FUNCTIONING**

This sideboard exist in 2 versions : 4 containers and 6 containers. they respectively keep 4 containers GN 1/1 and 6 containers GN 1/1 cold.

To turn on your refrigerated sideboard, press on the right switch (n°1 on picture) : the electronic thermostat (n°2 on picture) preset in factory is on. It flashes and then displays the temperature.

Press on the left switch (n°3 on picture) to turn on the light (n°4 and 5 on picture).  
A 1/4 lock drain valve, in lower part, enable to drain water from the container (n°6 on picture).

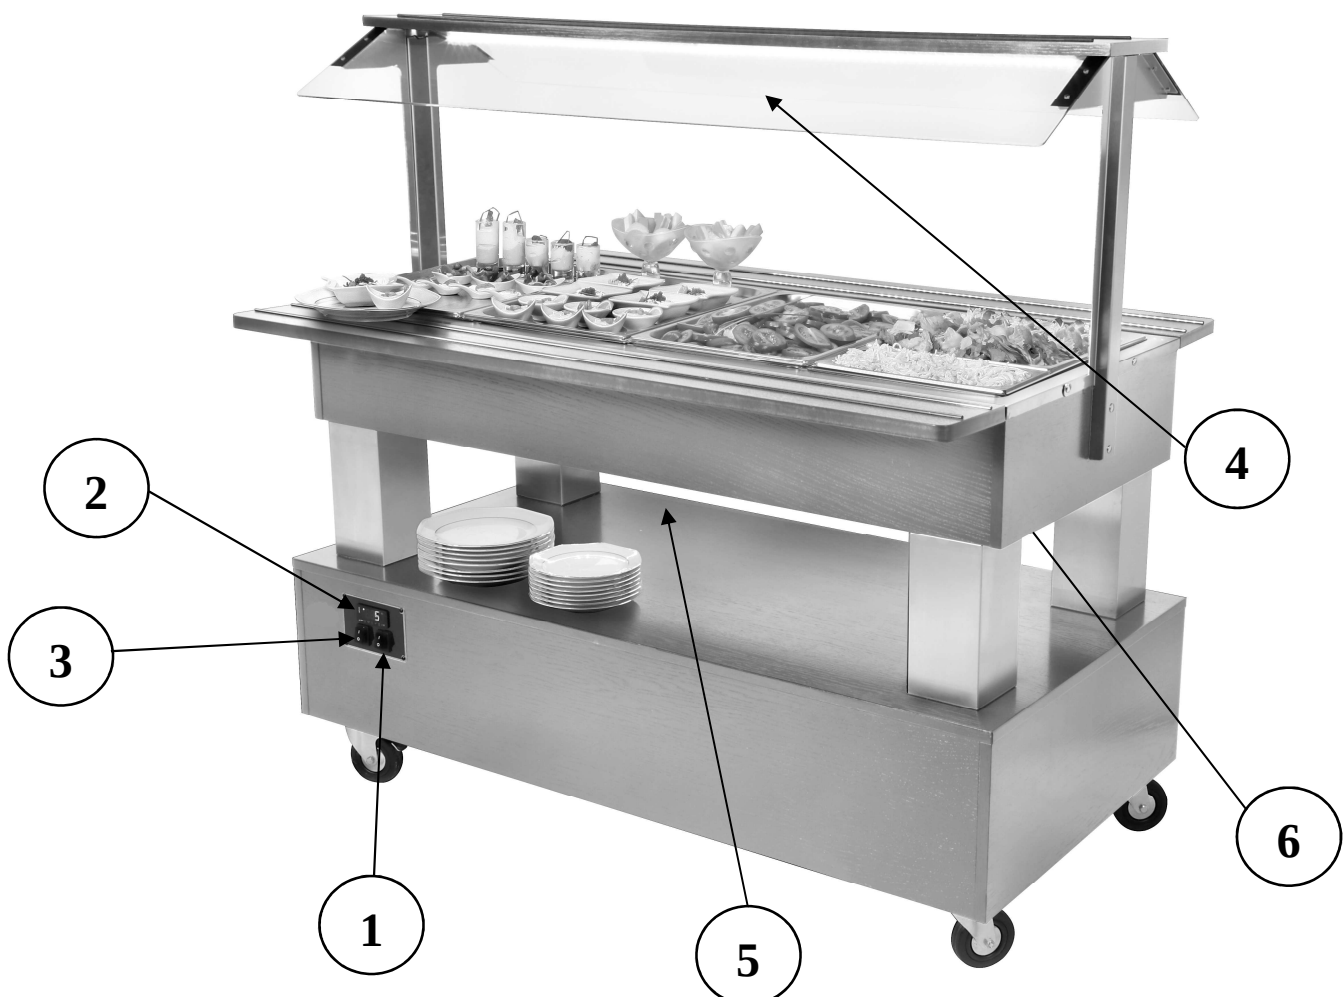

## **5. FUNCTIONING / MANIPULATION**

### **a) Installation / Assembly :**

- Place the equipment on a stable and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of 10 cm from the partition or the wall is considered enough.

### **b) First starting :**

#### ***First cleaning***

Clean the device before the first use. (See 6. Cleaning)

#### ***Connection of the device***

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a normalized plug with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person.

### **c) Use of device :**

#### ***Elements of command and display***

| <b>Command/Display</b>                 | <b>Function</b>      |
|----------------------------------------|----------------------|
| Electronic thermostat (n°1 on picture) | Temperature setting  |
| Switch 0/I (n°2 on picture)            | Light on / Light off |
| Switch 0/I (n°3 on picture)            | On/off               |

#### ***Starting***

Press on the switch (n°1 on picture), the machine is on. The preset electronic thermostat flashes and displays the temperature.

Wait until the sideboard is at the right temperature

Press on the second switch (n°3 on picture) to turn on light.

#### ***Temperature setting***

The electronic thermostat is preset in factory. It can be adjusted if necessary.

To modify the temperature, refer to the technical documentation of the thermostat.

## ***Stopping the appliance***

Set each switch on 0: the appliance is no longer functioning.  
Disconnect the power cable.  
Clean the appliance. (See 6. Cleaning)

### **d) Breakdown / repair :**

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

## **6. CLEANING AND MAINTENANCE**

### **Disconnect the device**

- Clean regularly the metallic parts after each use by using only use non-abrasive products, warm water and wash liquid: avoid the abrasive toweling. Rinse your device with a wet sponge and dry it with a soft cloth.
- Never clean the device under a water jet, the infiltrations would risk to damage it in an irreparable way.
- Never immerse the cord or the plug in the water or quite other liquid to avoid any electric shock.
- Never use abrasive product or vinegar; it could damage the container in irremediable way.

## **7. TECHNICAL SPECIFICATIONS**

| <b>Model</b> | <b>4 CONTAINERS</b> | <b>6 CONTAINERS</b> |
|--------------|---------------------|---------------------|
| Dimensions   | 1442x950x1370 mm    | 2092x950x1370 mm    |
| Weight       | 99 Kg               | 135 Kg              |
| Power        | 450 W               | 480 W               |
| Gas          | R290                | R290                |
| Temperature  | +2° à +10° C        | +2° à +10° C        |
| Current      | 2.5 A               | 2.5 A               |
| Voltage      | 220-240 V ~         | 220-240 V ~         |

## **8. NORMS AND LEGALS DISPOSALS**

The device is conform to :

IEC/EN 60335-1  
IEC/EN 60335-2-89  
EN 55014-1 + 55014-2  
EN 61000-3-2 + 61000-3-3

## **9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE**

The device respects the directives :

2002/96/CE (DEEE)N°34270064800021  
2002/95/CE (ROHS)  
2066/95 CE  
2004/108 CE



### **Reach rule**

Never put the device among household waste.

The device must be put down in a center of recycling for the electric equipments. The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection. For any information about the collection of electric and electronic waste, please contact your distributor.

## **10. GUARANTEE**

### **Conditions of guarantee**

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.


The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

### **Exclusion clauses of the guarantee**


**Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.**

## 11. ROOF ASSEMBLY

⚠ Remove the protective film from all the stainless steel part

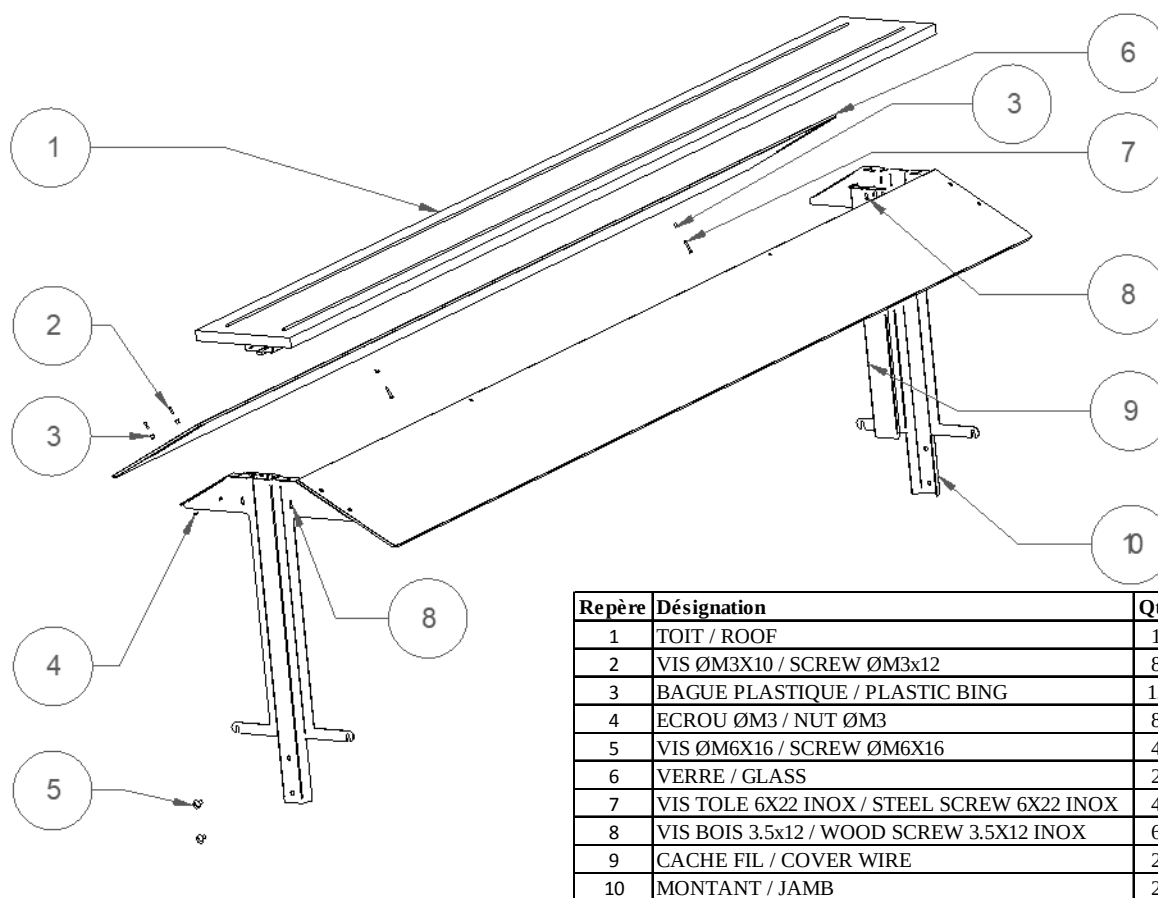


Put the roof on a carton to avoid scratches. Remove the protective film from the jambs (10). Place the jambs on the roof and screw them together with 4 screws (8). Fix a glass (6), serigraphy inside, on the jambs with four screws (2), two rings (3) and four nuts (4). For 6 containers models, place the glass on the roof and screw them together with two screws (7) and two rings (3). Only one screw/ring are needed for 4 containers models. Repeat the operations for the other glass.

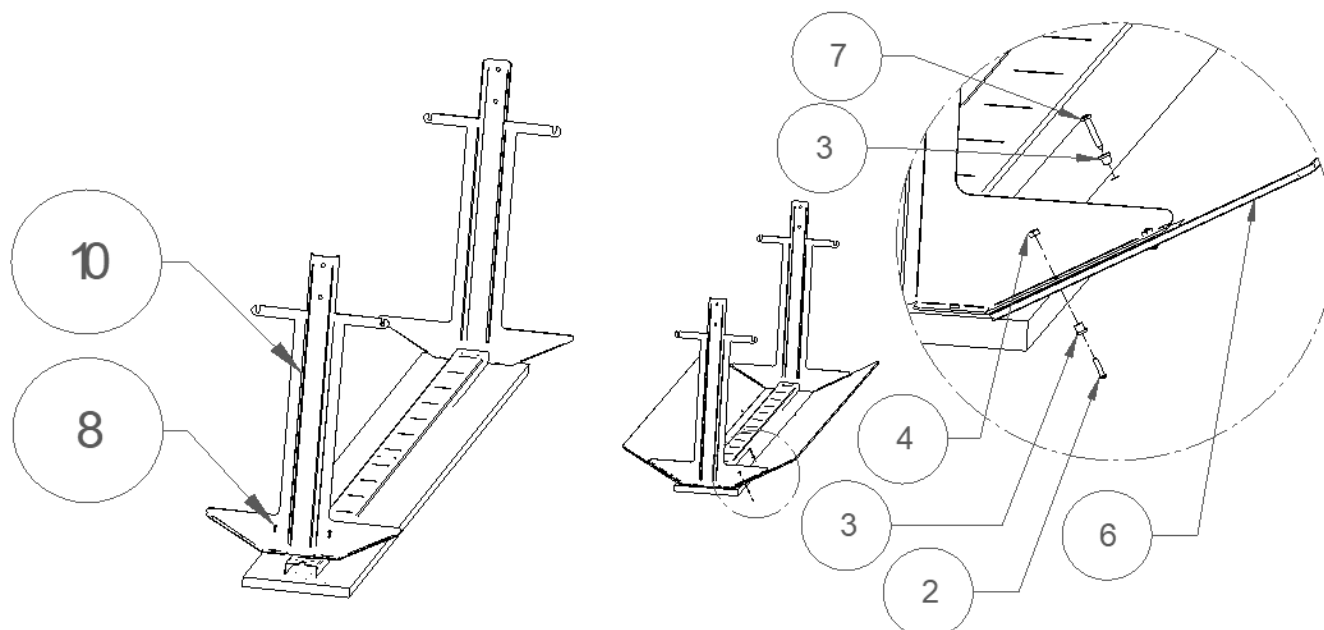



Slightly unscrew the 4 screws (5) placed on the tank. Put the previous assembly down on the 4 screws (Led connector on door side). Connect the Led.

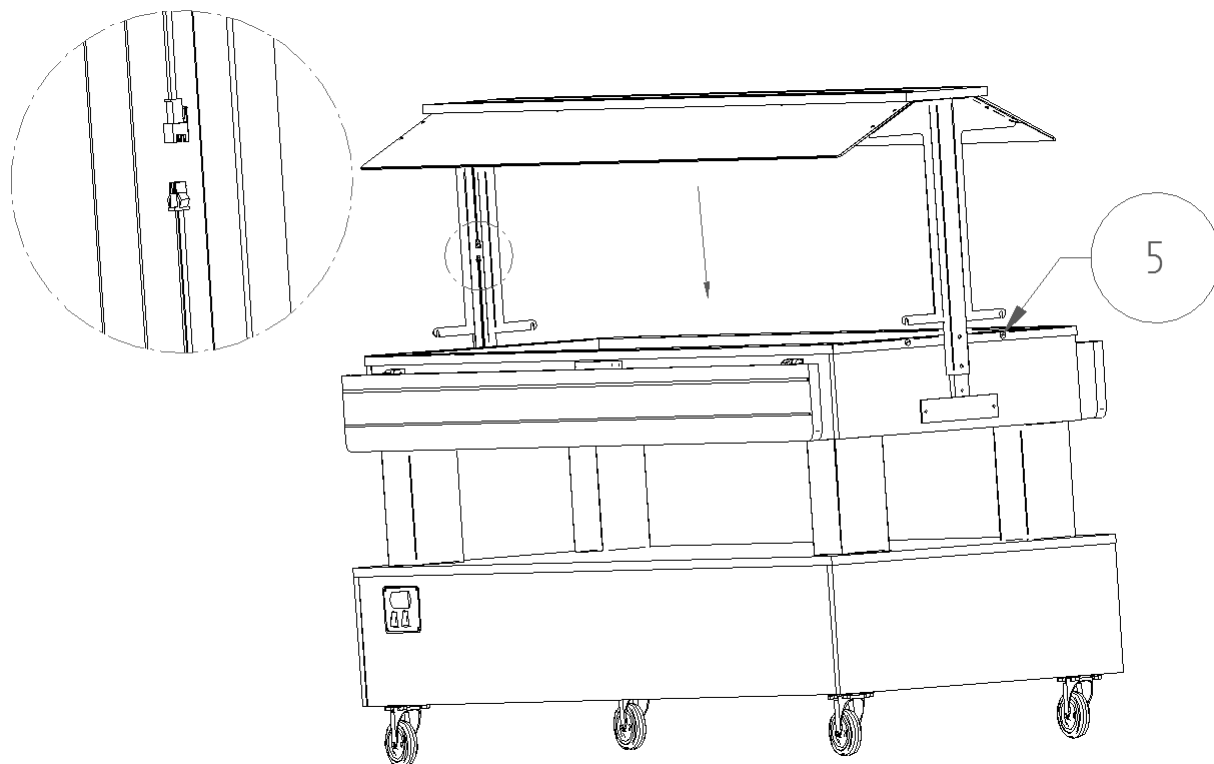

Remove the protective film from the wires cover (9), and install them in the jambs. Screw the jambs and the furniture together with four screws (5). Tighten the four screws (5) of the previous operation. Screw the wires cover onto the roof with two screws (8).

